

This Kit contains the Colonial Roof version of the 1/2" Thornhill. The parts list on this page describes the Colonial Roof parts that have been packed in this kit, instead of the Hip Roof parts that are described in the original instructions. Substitute these assembly instructions for steps 9 through 12 in the original instructions.

Parts List:

- (1) Rear Roof: (³/₈") 22⁵/₈" x 10¹/₄", bev 45°
- (1) Center Front Roof: (³/₈") 18¹¹/₁₆" x 10¹/₄", bev 45°
- (2) Eave: (³/₈") 10¹/₄" x 2", bev 45°
- (1) Left Gable Roof: (³/₈") 5¹/₂" x 4⁷/₈", bev²
- (1) Right Gable Roof: (³/₈") 5¹/₂" x 4⁷/₈", bev²
- (1) Gable Triangle: (³/₈") 6⁷/₈" x 3¹³/₁₆" tall
- (2) Attic Endwall: (³/₈") 13¹/₄" x 6⁵/₈" tall, window cutout
- (2) Attic Partition: (³/₈") 6⁵/₈" tall, door cutout
- (2) Kneewall: (³/₈") 1¹/₂" x 7⁵/₈", bev 45°
- (1) Center Kneewall: (³/₈") 1¹/₂" x 5¹/₈", bev 45°

Assembly Instructions:

9. Temporarily tape the Attic Endwalls and Rear Roof in place (Illustration #1).

10. Glue and tape one Attic Partition in place to the right and flush with the stair hole (the door cutout must be in front of the stair hole). Install the rest of the parts as shown in Illustration #2, tight to the Rear Roof. Do not let the Rear Roof lift away from the third floor at the back edge. Check to make sure that all the parts are straight and square as the glue dries.

11. Remove the Temporarily placed Attic Endwalls and Rear Roof. Glue and tape the Attic Endwalls in place touching the Kneewalls (about ³/₈" in from the end of the top floor) (Illustration #5).

12. Tape the Roof panels together on a flat work surface with the points of the bevels touching at the top. Set the Roof assembly on the house centered side-to-side. Glue and nail the Rear Roof and Eaves to the house.

Follow steps #13 and #14 in the original instructions.

Note: in step 15 (shown in Illustration #16) The Replacement Gable Triangle overhangs the Center Front evenly (1/2") on both ends.

Omit step 16... this paragraph does not apply to the colonial roof version of the 1/2" C-9001

Complete the assembly of your dollhouse starting with step #17 in the original instructions.

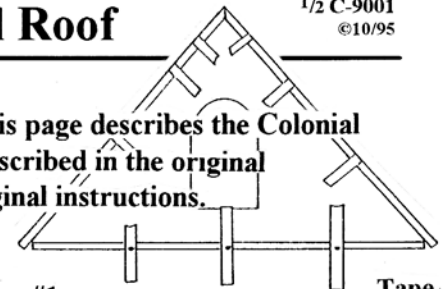


Illustration #1

Illustration #2

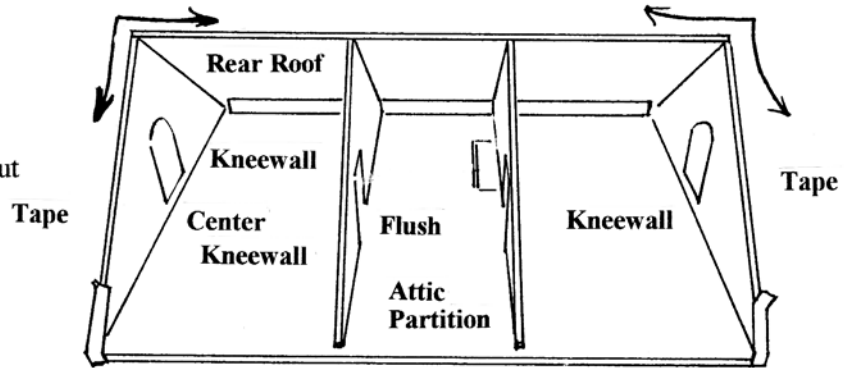


Illustration #3

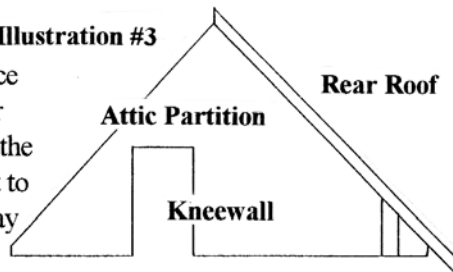


Illustration #4


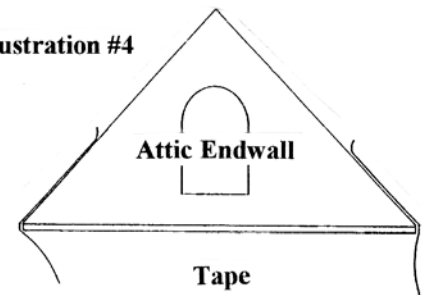


Illustration #5



Attic Endwall
Evenly Spaced (about ³/₈")
From the End of the Top Floor

Illustration #6

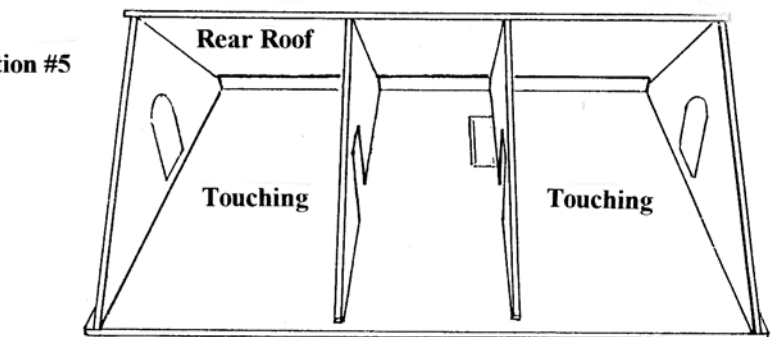