


Before Construction: Cut Electrification Slots.  
 Line up the slots with the Attic Ceiling using the flat top of the Attic Dividers as a guide. Cut the slots  $\frac{3}{32}$  deep using the depth of the grooves in the Sides as a guide, and making the slots  $\frac{1}{32}$  deeper (half again) so they will be exposed when the floors are glued into the grooves.

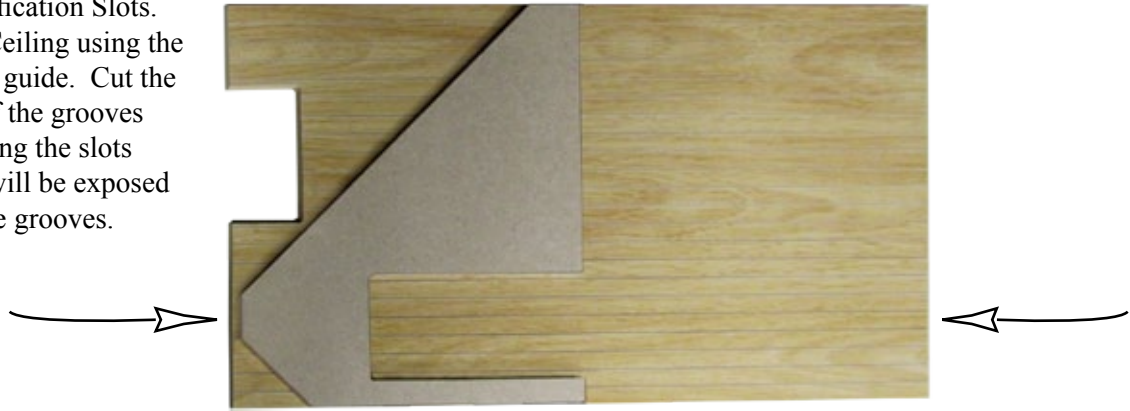

Cut a slot in each end of both floors.

Run the Main Loop before attaching the Housebody to the foundation. Leave a flap under the Base Floor on each end to attach to the inside of the Foundation.

