


## Paint the Door



1. Pull the bottom Pin with a knife. Tip the Door out - pull the top pin with plyers.

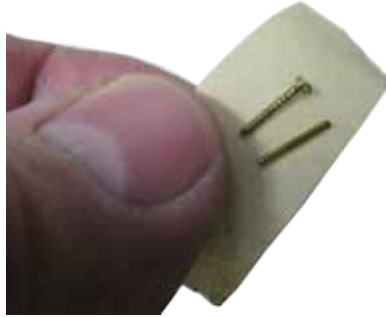

Don't lose the pins!  
(if you do, a cut-off paper clip will work)




2. Paint the First coat. Put on enough paint to fill the grain but not to leave much on the surface.




A foam brush or an artist's brush... lay the paint on, mop up the excess.



Separate colors on outside edges

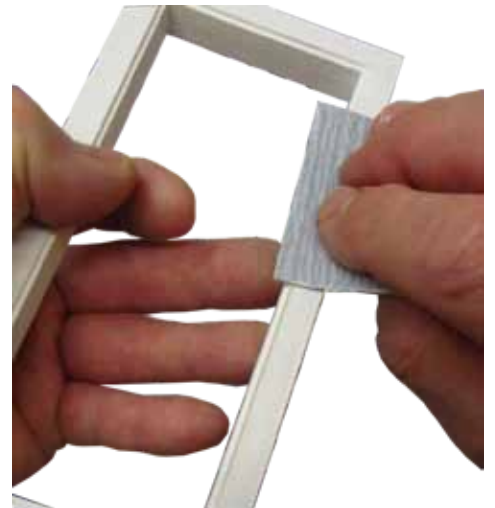

3. Sand after the first coat until the wood is smooth and the paint is transparent.

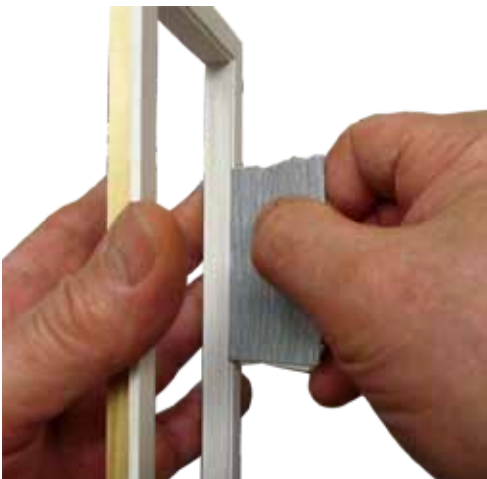


Sanding after the first coat is what makes the wood smooth. The paint fills and stabilizes the grain, so the sandpaper can clip off the roughness and leave the wood silky and uniform. Sand in all the corners and details.



4. The second coat goes on thick and creamy, but without drips or puddles.


## Paint the Door (2)

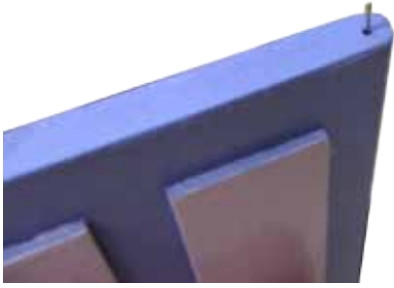

5. Put the headless pin in the top hole




6. Clean the top pin hole on the side that will be hinged.

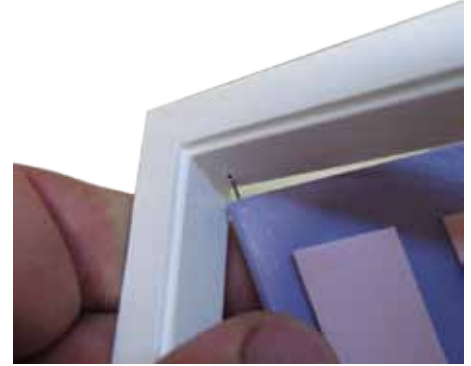

7. Feed the Top Pin into the hole in the door top frame



8. Swing the door into the frame from the inside

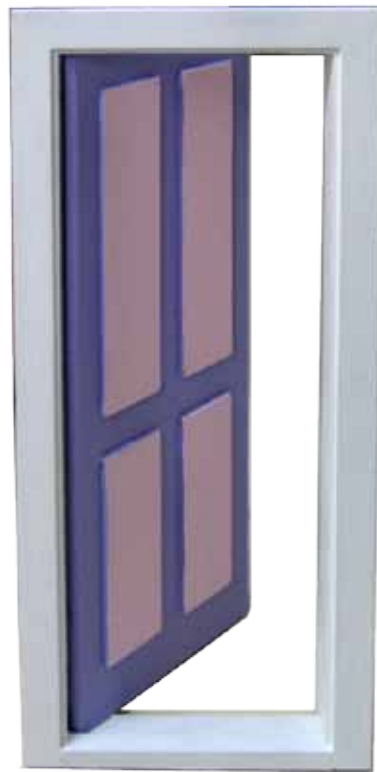

9. You will have to “find” the hole for the bottom pin (the pin with a head)  
- push it in all the way.

10. Test that the Door opens and closes smoothly. Rub a sticky door frame with waxed paper.



Install the Door after most interior finishing is done.